
# **MEASUREMENT CHART for Penicap dimensions**

### Measurements & Sizes:

The Penicap sizes are made according the most common sizes of penis of different indivduals, due to our longstanding experience and knowledge of their variety. Our sizes 1-7 cover about 99% of all sizes, we have ever met. The correct measurement of the circumference behind the glans is most important for a good functionality and comfort.

#### **How to take a measurement:**

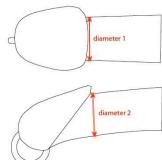

Measure your penis ins soft and hard condition, take with a caliper distances of penisshaft in two planes behind the glans at the most narrow diameter and place the caliper without compression. Measure several times, and take an average of all measurements.

Measure your FLACCID and SMALL penis in mm:

Take Diameter 1 and 2

The LARGER of the diameters 1 or 2 = SIZE of PENICAP (according table below)

if you are between sizes, choose the smaller one.

#### example:

Flaccid penis with largest diameter behind glans: 32 mm = Penicap Size 5 Flaccid penis with largest diameter behind glans: 27 mm = Penicap Size 3

Attention: If your penis has a strong difference between soft and hard state:

more than 5mm: 1 size larger more than 8 mm: 2 sizes larger

## Inside dimensions of Penicap (most narrow point behind glans):

Size	Internal diameter Penicap in mm smallest diameter of shaft behind	
	Diameter in mm (average)	Diameter in inches
1	23.5	0.92
2	25	0.98
3	27	1.06
4	29	1.14
5	31	1.22
6	33	1.30
7	35	1.38

- the Penicap does not work properly, if the size is too large: As a rule the Penicap must be smaller 3-4
  mm than the full erect penis.
- You may choose the Penicap also a bit smaller than recommended. But never smaller than 1 size smaller than the recommended size, otherwise discomfort will be likely.
- If you are in between two sizes, choose the smaller one. Men with a foreskin (foresking MUST be loose, or problems will arise) should choose one size taller.